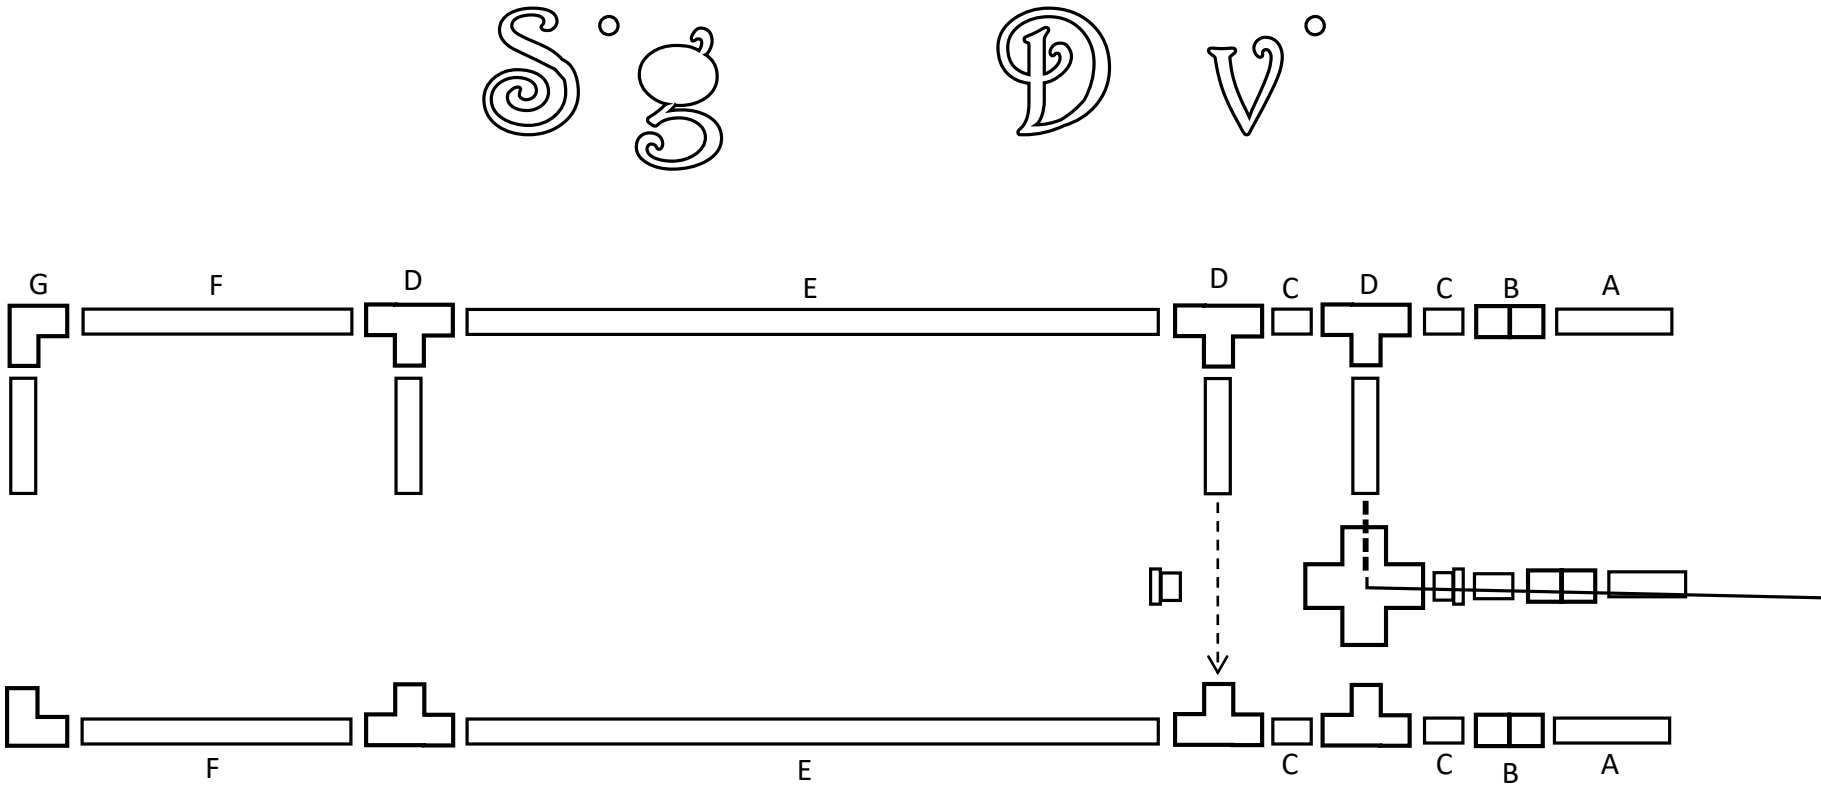
G
F
D
E
D
C
D
C
B
A
F
E
C
C
B
A

Sigma Device

Detail A

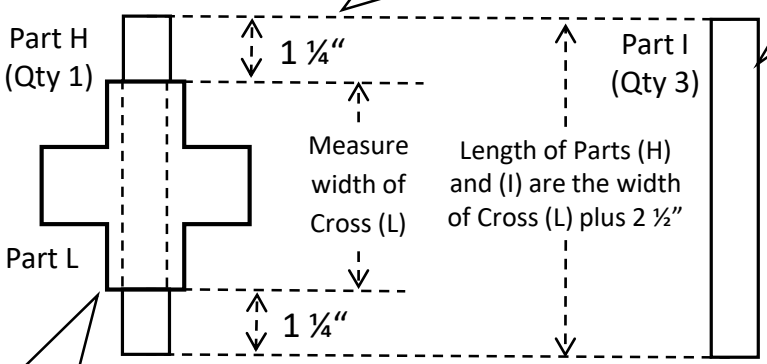

Measure and cut all three segments of Part I to match the length of Part H

Adjust each of the outer 45° angles so they face toward center with 2" gap before gluing (below)

Cut length of Parts H and I to be 2 ½" longer than the Cross width to allow ¼" space on each side between edge of Cross and edge of Tee after assembly

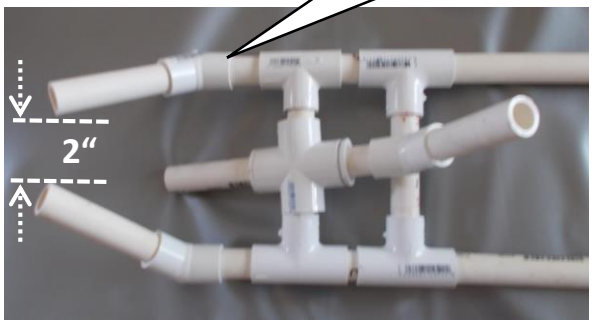

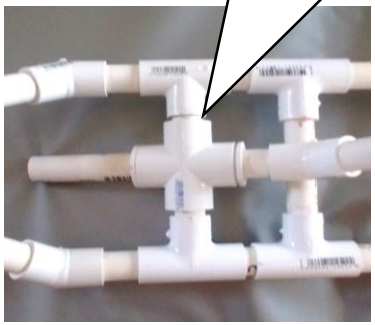

Part H inserts thru Part L. Do Not Glue. Part L rotates freely around Part H

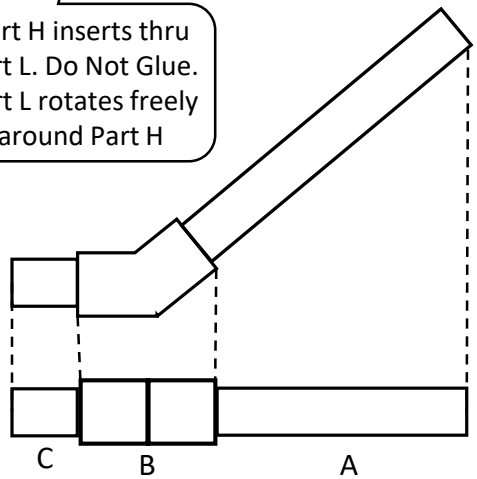

Detail B – Qty 2

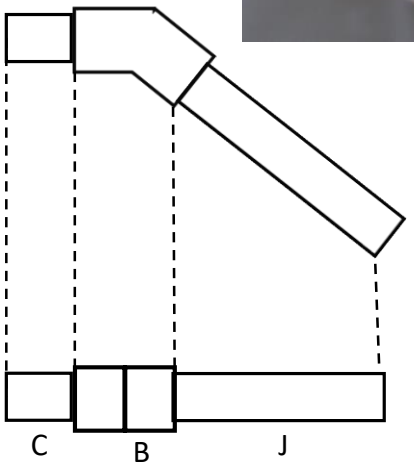
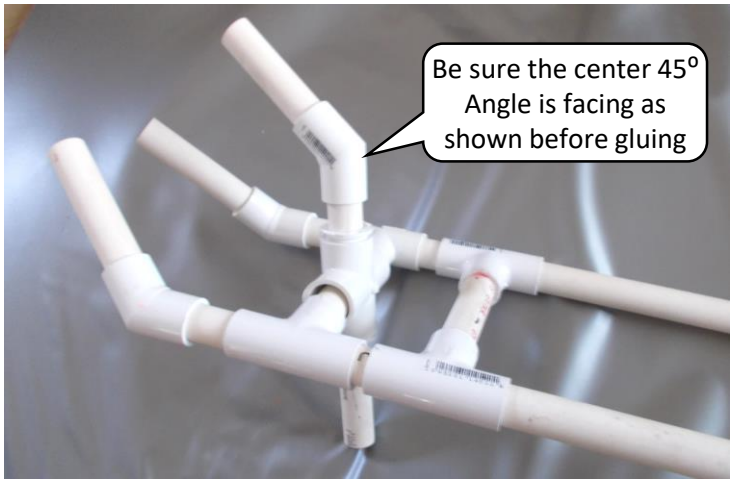
Detail C